

PLANTING MIX:

SOIL WITHIN TREE PIT SHALL CONSIST OF:
6 PARTS PREPARED TOPSOIL
2 PARTS WELL ROTTED COW OR SHEEP MANURE
1 PART PEAT MOSS OR LEAF MOULD MULCH

BARE ROOT PLANTING:


SPREAD OUT ROOTS OVER COMPACTED TOPSOIL BASE AND BACKFILL WITH PLANTING MIX IN LAYERS, CAREFULLY WORKING SOIL BETWEEN THE ROOTS AND COMPACTING AROUND THE SHRUB. THOROUGHLY WATER UPON COMPLETION.

PRUNE OUT ALL BROKEN, DISEASED OR WEAK BRANCHES, RETAINING NORMAL SHRUB SHAPE. PRUNE SO AS TO LEAVE AS LITTLE STUBS AS POSSIBLE.

PREPARED PLANTING SOIL MIXTURE AS SPECIFIED. TAMP AND WATER TO ELIMINATE AIR POCKETS AND THOROUGHLY WATER AFTER PLANTING.

100mm DEPTH SHREDDED CEDAR MULCH OR APPROVED ALTERNATE. PROVIDE CONTINUOUSLY MULCHED BEDS. MAINTAIN ORIGINAL GRADE OF SHRUB BASE. SURROUND PLANTS WITH LANDSCAPE FABRIC TO INHIBIT WEED GROWTH.

MAINTAIN ORIGINAL SHRUB BASE AFTER PLANTING

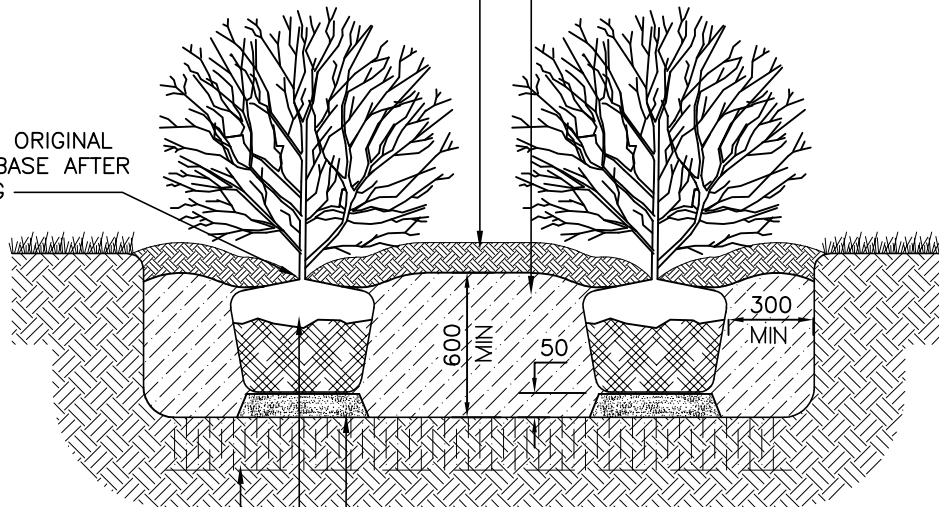

50mm DEPTH TOPSOIL BASE COMPACTED TO PREVENT SETTLEMENT

REMOVE BURLAP FROM TOP THIRD OF BALL. IF PLANT IS POTTED, REMOVE CONTAINER AND SCARIFY ROOT BALL PRIOR TO SETTING IN GROUND.

BREAK-UP OR SCARIFY COMPACTED SUBSOIL BELOW PLANTING BED TO A MINIMUM DEPTH OF 150mm AND MIX WITH TOPSOIL TO IMPROVE DRAINAGE AND INCREASE ROOT ZONE AREA.

All dimensions are in millimetres unless otherwise noted.

City of Pickering

Engineering Services Department

DRAWN
A. MOSTERT

APPROVED
A. MOSTERT

DATE
AUGUST 2015

SHRUB PLANTING DETAIL

REVISION NO.

DATE

P-1114